

Model YR0236 Binocular Microscope

Instruction Manual

Thank you very much for purchasing our Biological Microscope YR0236.

Please read the "Operating Instructions" and "Warranty" before operating this unit to assure proper operation. After reading these documents, be sure to store them securely together with the "Warranty" at a hand place for future reference.

Warning: Before operating the unit, be sure to read carefully and fully understand important warnings in the operating instructions.





OUR SERVICES

Benefits and Support

In Kalstein France, we take care of the full satisfaction of our customers, that is why we provide value-added services of the highest level based on our experience.



Online Inductions and Trainings

In any part of the world, receive your induction or training from our specialized team of engineers



Quick Response

Our work team is always available to response all your consults or questions, in order to support you in any situation.





#Letsgivemore W

Thanks to your purchase, a donation will be made to a non-profit foundation that fights against breast cancer and helps most vulnerable communities.



Technical Support

Enjoy of personalized advice for the correct preventive and corrective maintenance of your equipment, thanks to Kalstein's manuals and articles, special catalogues and video tutorials.





Delivery Logistics

We take care of all the necessary logistics for the dispatch of your goods, whether is by sea, land or air.



Kalstein Worldwide

With more than 25 years growing with our customers, Kalstein's multiformat and modern content, is now present in more than 10 countries and increasing.





CONTENTS YR0236

CONTENTS	1
USER NOTICE	2
1. Components Name	3
2. Assembly	4
2.1 Assembly Diagram	4
2.2 Assembly procedure	5
3. Adjustment and Operation	9
3.1 Adjustment set diagram	9
3.2 Adjustment and Operation	11
4. Technical Specifications	15
5. Outfit	17
6. Troubleshooting Guide	19



USER NOTICE

YR0236

1. Safety Note

- 1. Open the box carefully to avoid the accessories, like lens, dropping to ground or being damaged.
- 2. Do keep the instrument out of direct sunlight, high temperature or humidity, dusty and easy shaking environment. Make sure the stage is flat, horizontal and firm enough.
- 3. When moving the microscope, carefully carry it with the handle and the base.
- 4. Make sure the instrument is earthed, to avoid lighting strike.
- 5. For safety, be sure the main switch is in "O" (off) state and cut off the power supply before replacing the bulb or the fuse. If you replace the bulb during use or right after use, allow the lamp bulb and the lamp house to cool completely before touching.

(Designated bulb: 1W S-LED or 6V20W Halogen Lamp)

- 6. Check the input voltage: be sure the input voltage which is signed in the back of the microscope is consistent with the power supply voltage, or it will bring a serious damage to the instrument.
- 7. Always use the power cord provided by Kalstein.
- 8. The electrical equipment of the microscope should be discard as electronic waste.


II. Maintenance and Care

- 1. All the lenses have been adjusted properly; do not dismount them by yourself please.
- 2. The nosepiece and coarse and fine focusing parts are so delicate that it is forbidden to disassemble them carelessly by yourself.
- 3. Keep the instrument clean, and do not pollute the optical element when wiping away the dust on the instrument.
- 4. The contaminations on the prism, like fingerprints and oil smudges, could be gently wiped with a piece of soft cloth or tissue paper, gauze which has been immersed in pure alcohol or ether. (Note that the alcohol and ether are highly flammable, do keep them away from the fire or potential sources of electrical sparks, and use them in a drafty room as possible as you can.)
- 5. Do not attempt to use organic solvents to clean the microscope components other than the glass components. To clean them, use a lint-free, softcloth slightly moistened with a diluted neutral detergent.
- 6. When using, if the microscope is splashed by liquid, cut off the power at once, and wipe away the splash.
- 7. Do not disassemble any parts of the microscope, as this will affect the function or reduce the performance of the microscope.
- 8. Place the instrument in a cool, dry position. When not using the microscope, keep it covered with a dust cover. Make sure the lamp socket is cool before covering the microscope.



1. Components Name

YR0236

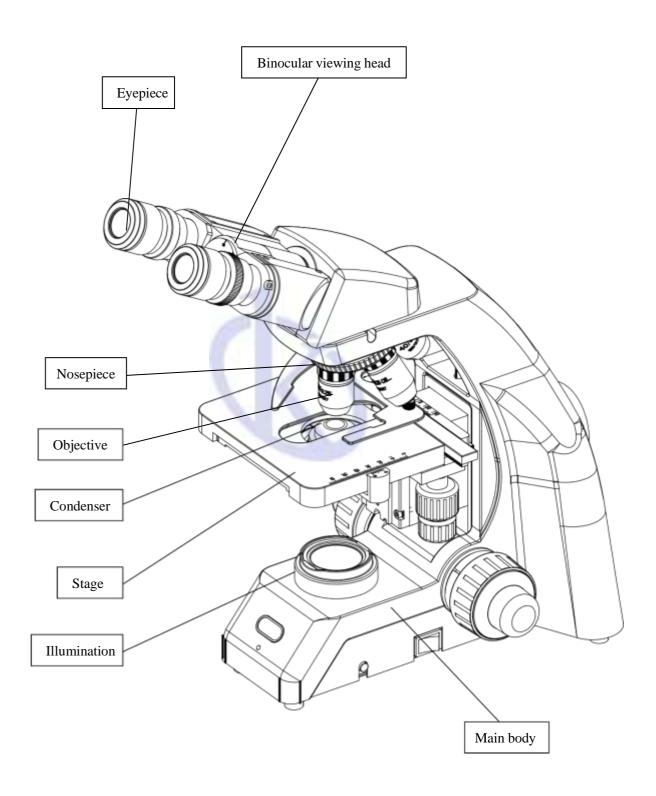




2. Assembly YR0236

2.1 Assembly Diagram

The following figure shows the installation sequence of the components. The number in the figure shows the assembly steps.

- **★** Before installing, be sure every components is clean, do not score any parts or glass surface.
- **★** Keep well with hexagon wrench provided. When changing the components, you will need it again.



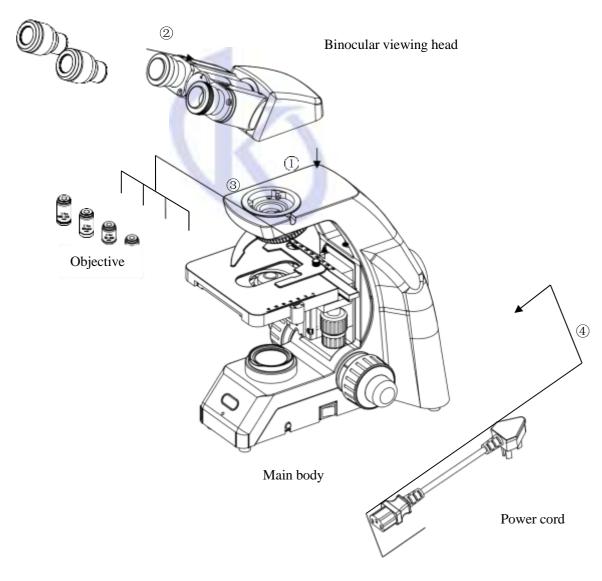



2.2 Assembly procedure




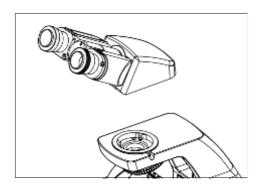


Fig.1

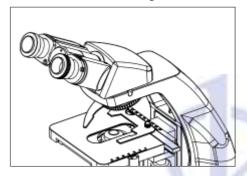

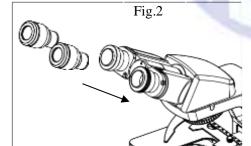

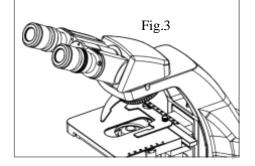

2.2.1 Installing binocular viewing head (Fig.1-2)

Insert the binocular viewing head into the microscope head and turn it to a proper position, then tight it.

2.2.2 Installing the eyepiece (Fig3-4)

Insert the eyepiece into the eyepiece tube until they are against each other, as shown in Fig.4.

Fig.4 YR0236



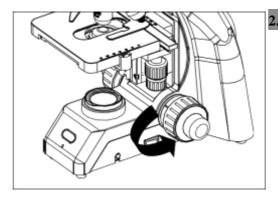


Fig.5

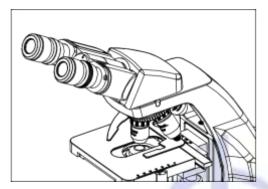


Fig.6

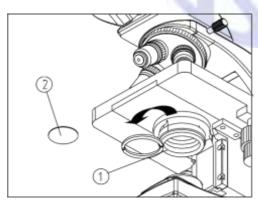


Fig.7

2.2.3 Installing the objective (Fig.5-6)

- 1. Adjusting the coarse focus knob until the support device of the mechanical stage reaches its low limit position.
- Screw the lowest magnification objective into the nosepiece from the left or the right side, then revolve the nosepiece clockwise and mount other objectives by the sequence of low to high magnification
- ❖ Installing objective this way will make the change of magnification to be easier during using.
- **★** Clean the objective regularly, for lens is susceptible to dust.
- **★** When operating, use 10 × magnification objective to search and focus specimen firstly, then replace with higher magnification objective if necessary.
- ★ When replacing the objective, slowly turn the nosepiece until you hear "clicked", that means the objective is in place.

2.2.4 Mounting the filters (Fig.7)

- **1.** Open the condenser carriage①;
- **2.** Place the required filter 2 into the condenser, then close the condenser carriage.
- **★** the filter of the standard outfit is green and baby blue.



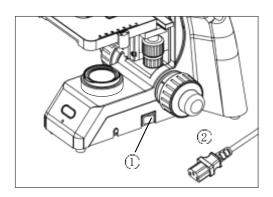


Fig08

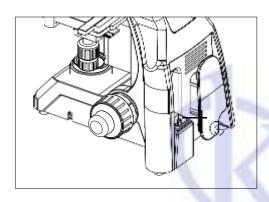


Fig.9

2.2.4 Connecting the Power Cord (Fig.8-10)

★ The cable and cords are vulnerable when bent or twisted, never subject the power cord to excessive force.

- Set the main switch①o "O" (off) state before connecting the power cord...
- 2. Insert the plugs@into the power jack@f the microscope safely.
- Plug the power cord@into the power supply receptacle. Make sure the connection is well.
- **★**Do use the supplied power cord all thetime. If lost or damaged, select the same standard cord, please.
- **★**A wide range of voltage ,like 100V~240V, is acceptable for this microscope.

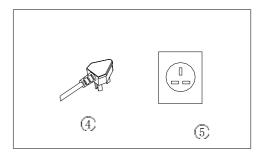


Fig.10

2.2.5 Replacing the fuse (Fig.9-10)

Do remember to set the main switch ①to the state "O" (OFF) and unplug the power cord before replacing the fuse. Rotate the fuseout of the holder ③, replace with a new fuse, then rotate it back to the holder again.



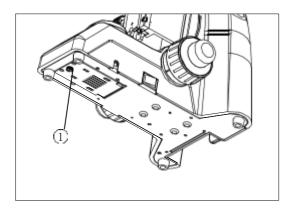


Fig11

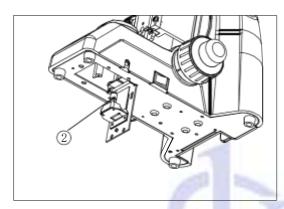


Fig12

2.2.8Installing and Replacing the bulb

(Fig.11-12)

- ♦ Please use the specified halogen Lamp 6V20W.
- 1. Loosing the screw①。
- 2. Hold the bulb@after you wrap it with gauze or other protection materials, and then insert its pindeeply intothe jack in the lamp holder.
- 3. Duringmicroscope using or soon after it is turned off, the bulb, the lamp house and nearby parts will be very hot and will cause serious burns. Please turn the main switch to "O" (off) and disconnect the power plug, and make sure the bulb, the lamp room and periphery are all cool. Then, you can do your replacing.
- **★** Insert the bulb gently. Squeezing too hard will damage the bulb.
- **★** To prevent reduced bulb life or cracking, do not touch the bulb with bare hands. If fingerprints are accidentally left on the bulb, wipe the bulb with a soft cloth.



3. Adjustment and Operation

YR0236

3.1 Adjustment set diagram

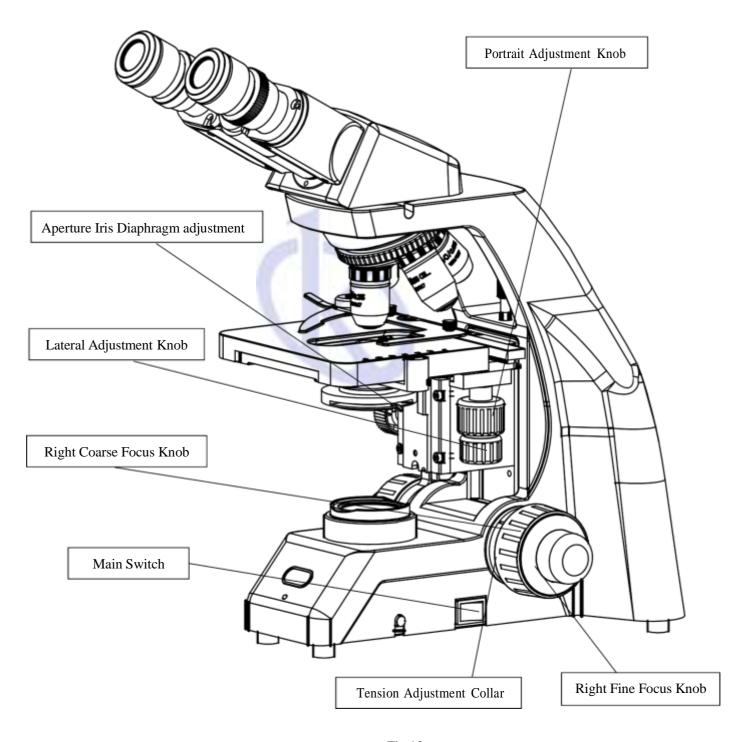


Fig.13




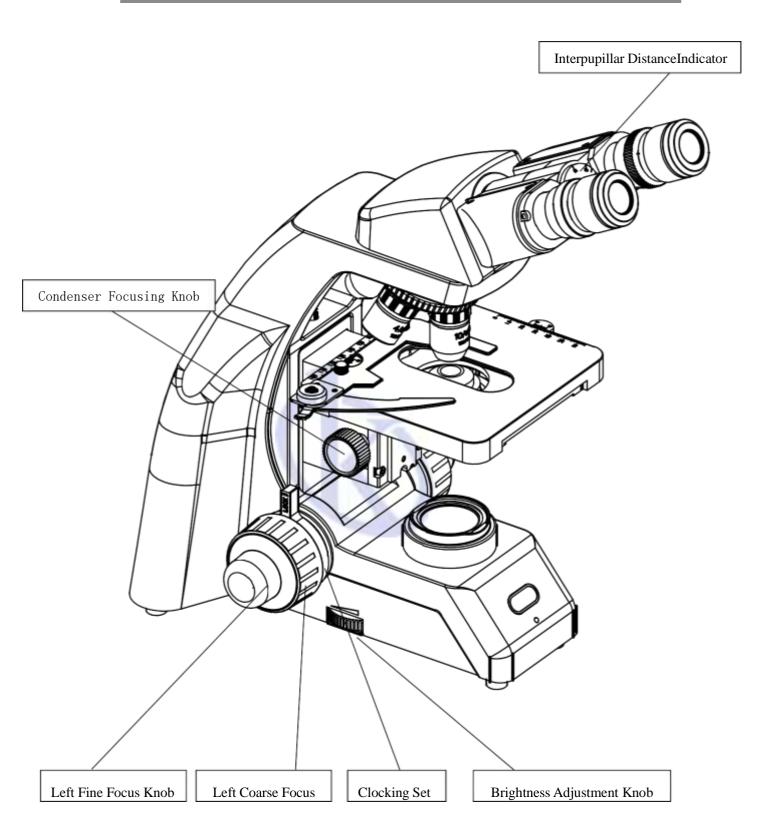


Fig.14

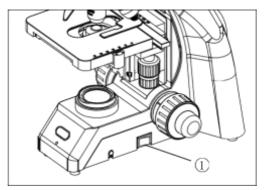

3.2 Adjustment and Operation

3.2.1 **Brightness Adjustment** (Fig.15-16)



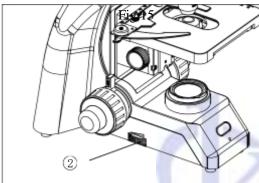




Fig.16

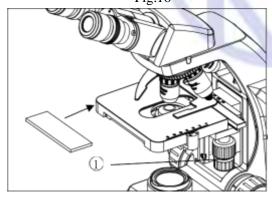


Fig.17

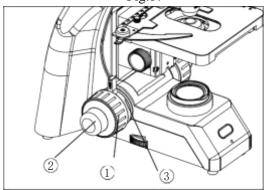


Fig.18

- 1. Connect the power cord and set the main switch 1 to "-" state (ON).
- Turning the brightness adjustment knob ②.

3.2.2 Placing the Specimen (Fig.17)

- Place the specimen the center of themechanical stage and use the stage clips toclamp it.
- Turn the portrait and lateral adjustment knob① of the mechanical ruler, move the specimen to the required position.
- Be careful when changing the objective. If you finish the observation with the short working distance objective, and want to change another one, becareful of not letting the objective touch the specimen.

3.2.3 Focusing the Specimen (Fig.18)

1. Focus the specimen with 10X objective. To avoid the objective touching the specimen focusing, you should raise the mechanical stage to let the specimen close to the objective at first, then slowly separate them to bring the specimen to focus. Turn the coarse focus knob@conversely to lower the specimen and search images in the 10×ocular simultaneously, and thenuse the fine knob2 to focus. After that, you can replace with other magnification objectives safely, and focus without the risk of damaging the specimen.

★ To make the observation more convenient, you can use the locking set 3 to fix the stage in a vertical direction.



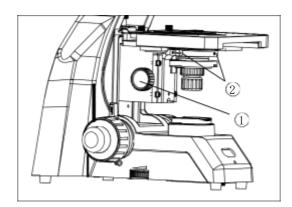


Fig.19

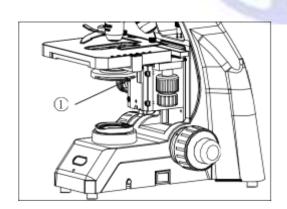


Fig.20

3.2.4 Condenser Adjustment (Fig.19)

Turn the condenser focus knob ① to move the condenser up and down.Raise the condenser when using the high magnification objective, and descend it when using the low magnification one.

- 1. Focus the specimen with $10 \times$ objective.
- 2. Adjust the condenser focus knob①to get a clear image of the field iris diaphragm.
- Turn the condenser centering knobs2to center the image of field iris diaphragm in the field of view.
- **★** The condenser and the objectiveare coaxial. It has been adjusted before leaving factory, so the user needn't to adjust them by self
- ★ The highest position of the condenser has been adjusted too. It also needn't any user's operation. (The top surface of the condenser is 0.03mm-0.4mm lower than the stage top surface.)

3.2.5 Aperture Iris Diaphragm Adjustment (Fig.20)

Turn the aperture iris diaphragm stick ①to adjust the aperture iris diaphragm.

★ The aperture iris diaphragm is designed for the adjustment of the numerical aperture, not for the brightness.

Generally, setting the aperture iris diaphragm to 70-80% of the N.A. of the objective in use will provide an image with good contrast. If you want to observe the image of the aperture iris diaphragm, remove one eyepiece and look through the tube. You will see a dark circle encroaching on the bottom of the tube.



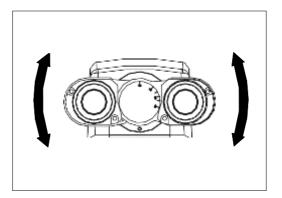


Fig.21

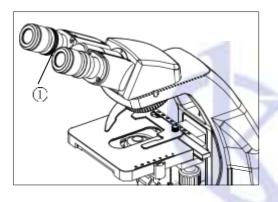


Fig.22

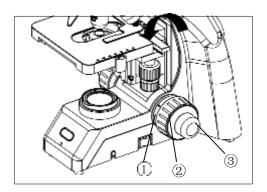


Fig.23

3.2.6 Adjusting the Interpupillary Distance (Fig.21)

The interpupillary distance range:55mm~75mm. While looking through the eyepieces, move both eyepieces round until the left and right fields of view coincide completely.

3.2.7 Adjusting the Diopter (Fig.22)

- 1. Turn the eyepiece ①to adjust the diopter while looking through it.
- ★The diopter range of the eyepiece is±5 diopter. The number aligned to the line on the viewing head is the diopter in use.

3.2.8 Adjusting the tension adjustment collar (Fig.23)

★ Turn the tension adjustment collar①with your fingers.When the collar is turned in the direction of the arrow, thetension of the coarse adjustment knob② increases. Turning the collar in the opposite direction decreases the tension.

If the nosepiece descends on its own or if the specimen gets out of focus quickly even when it is brought into focus using the fine adjustment knob③, it means the tension of the coarse adjustment knob is too low. Turn the collar in the direction of the arrow to increase the tension.



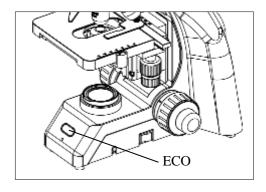


Fig.24

3.2.9 Adjusting the Interpupillary Distance (Fig.24)

The microscope with ECO:

The equipment can induct the front surroundings in 1m. At the moment, it light red and light source keeping working.

When people left and no object within the front 1m, the red light would flashed. After 15 minutes, light source stop working.





4. Technical Specifications

YR0236

4.1 Main Specifications

Optical System	Limited optical system/Infinite optical system
Viewing Head	Seidentopf Binocular Head, 30°Inclined,Interpupillary Distance 48-75 mm
Eyepiece	WF 10X/18/WF 10X/20
Nosepiece	Backward Quadruple Nosepiece
Objective	Achromatic Objective/Infinite Semi-plan Objective4 \times , $10\times$, $40\times$, $100\times$
Focusing	Coaxial Coarse and Fine Adjustment, Moving Range 0.002mm, Fine Division 20mm
Condenser	Abbe Condenser,NA1.25
Stage	Double Layers Mechanical Stage 160×140, Moving Range 74×50
TimingBelt Stage150×139mm, Moving Range 75×52mm	
Illumination	1W S-LED /6V20W Halogen Lamp

4.2 Eyepiece and objectives

4.2.1 Achromatic Objective

1.2.1 Hemomatic Sojective					
Magnification	NumericalAp erture (NA)	Focal Length(mm)	Focal distance (mm)	Working Length (mm)	Objective
4×	0.10	0. 17	31.05	37. 5	dry
10×	0.25	0. 17	17. 13	7. 316	dry
40×	0.65	0. 17	4.65	0.632	dry
100×	1.25	0.17	2.906	0.198	oil

4.2.2 Infinite Semi-plan Objective

Magnification	Numerical Aperture (NA)	Focal Length(mm)	Focal distance (mm)	Working Length (mm)	Objective
4×	0.10	0.17	45	16.8	dry
10×	0.25	0.17	18	5.8	dry
40×	0.65	0.17	4. 5	1.43	dry
100×	1.25	0.17	1.8	0.13	oil



4.2.3 Eyepiece

Eyepiece	Magnification	Focal Length (mm)	Field of View (mm)
Wide field eyepiece	10×	24. 95	Ф18
Wide field eyepiece	10×	25	Ф20

4.2.4 Total Magnification

Eyepiece	10×	10×	10×	10×
Objective	4×	10×	40×	100×
Total Magnification	40×	100×	400×	1000×





5. Outfit YR0236

Item	em Specification		Standard Outfit
	1	Quantity .	YR0236
	Main Standard	1	•
	Main Standard (battery charging)	1	0
Main Body	Main Standard (ECO)	1	0
	Double Layers Mechanical Stage	1	•
	Condenser Holder	1	•
Viewing Head	Seidentopf Binocular Head	1	•
viewing flead	Seidentopf Trinocular Head	1	0
Condenser	Abbe Condenser, NA=1.25	1	•
Nosepiece	Backward Quadruple Nosepiece	1	•
	1W SLED	1	•
Tile min et in e	6V20WHalogen Lamp	1	0
Illumination	Blue, GreenFilter	1 each	0
	Spare Fuse 50T250V 500mA	2	•
Eyepiece	10×Wide Field Plan Eyepiece	2	•
Objective	Achromatic Objective4×	1	•
	Achromatic Objective 10×	1	•
	Achromatic Objective40×	1	•
	Achromatic Objective 100× (Oil, Spring)	1	•

Note: "●" Standard Outfit, ○" optional



6. Troubleshooting Guide

YR0236

6.1 Optical System

TROUBLE	CAUSE	SOLUTION
1. The edge of the field of	The nosepiece is not in the located position (objective and light path not coaxial)	Locate the nosepiece properly where it clicks
view is dark or the	The surface of the lamp becomes black	Change a new lamp bulb
brightness is not uniform	A lens (the objective, condenser, eyepiece or collector) is dirty.	Clean it thoroughly
2. Dirt or dust is visible in	Dirt/dust on the specimen	Replace with a clean specimen
the field of view	Dirt/dust on the eyepieces	Clean them
	Specimen is not covered	Add cover glass on it
	The thickness of the cover glass is not suitable	Use standard cover glass with thickness of 0.17mm
	Specimen is placed reversely	Turn it over
4	Dry objective has oil on it. (especially for 40X objectives)	Wipe the oil
3. Visibility is poor Image is not sharp;	A lens (the objective, condenser, eyepiece or collector) is dirty.	Clean it
Contrast is poor; Details are indistinct	Immersion oil is not used with the 100x objective	Use specified oil
	Air bubbles existed in the immersion oil	Eliminate the bubble
	The aperture iris diaphragm is stopped down too far	Adjust the aperture iris diaphragm properly
	Dirt or dust on the eyepiece	Clean it
	Condenser is not properly centered	Center the condenser with the centering screw
4. One side of image is blurred	The nosepiece is not properly engaged	Engage the nosepiece properly
	The specimen is not clamped	Clamp it with stage clips
5. The brightness is not enough	The aperture iris diaphragm is too small	Adjust it properly
	The condenser is too low	Adjust it properly
	A lens (the objective, condenser, eyepiece or collector) is dirty.	Clean it



6.2 Mechanical System

TROUBLE	CAUSE	SOLUTION
1.Field of view of one		
eye does not match	Interpupillary distance is incorrect	Adjust interpupillary distance
that of the other		
	The diopter is not proper	Adjust the diopter properly
2. Observation is tiring	The brightness of the illumination is not proper for eyes	Adjust the lamp voltage

6.3 Electrical System

TROUBLE	CAUSE	SOLUTION
	No power supply	Check the power cord connection
1.The bulb cannot light	The pin of the bulb doesn't insert properly	Insert the pin deeply
	The bulb broken	Replace with a new one
2. The bulb burns out suddenly	The bulb is not the specified one; The voltage is too high	Use the specified bulb; lower the voltage
3. the illumination is not bright enough	the voltage is too low	Raise the voltage
4 Imaga fliaka	The bulb is about to burn out	Replace with a new one
4. Image flicks	The bulb is not inserted deeply	Check its connection



All rights reserved ® KALSTEIN France S. A. S.,
Optimum Business Center 450 Rue Baden Powell,
• 34000 Montpellier, France.
TIf: +33 467158849 / +33 680760710/ +33 663810023
https://kalstein.eu
KALSTEIN FRANCE, S. A. S

